


Ultrascale Data Sheet

Issue: 001-060830

'ULTRASCALE' Type D Crank pin short hex nut

Fitting Instructions:

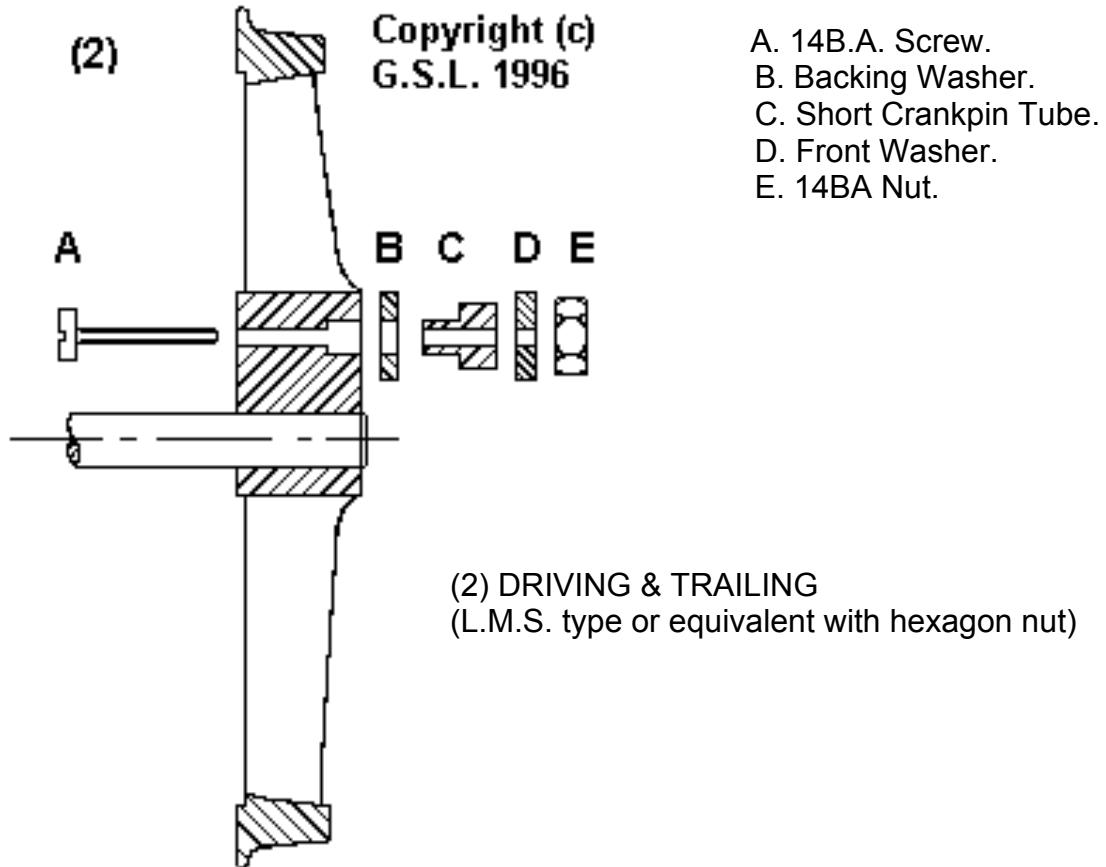

1 Fit backing washer over smaller diameter of crankpin tube up to shoulder.

2 Fit projecting small diameter backing washer and crankpin tube assembly into crankpin hole in front face of driving wheel and push home.

3 Fit 14 BA screw from back of wheel turning fully home with screw driver. (screw will 'self tap')

4 Assemble coupling rod over large diameter of crankpin tube projecting from front face of wheel.

5 Place front washer over projecting thread.

6 Assemble 14 BA nut on projecting thread and tighten. Remove surplus thread with side cutters.